

ARAT Telephone mount

Car Manufacturer:


BMW

Type:

E46, 3 series

Part No:

1260

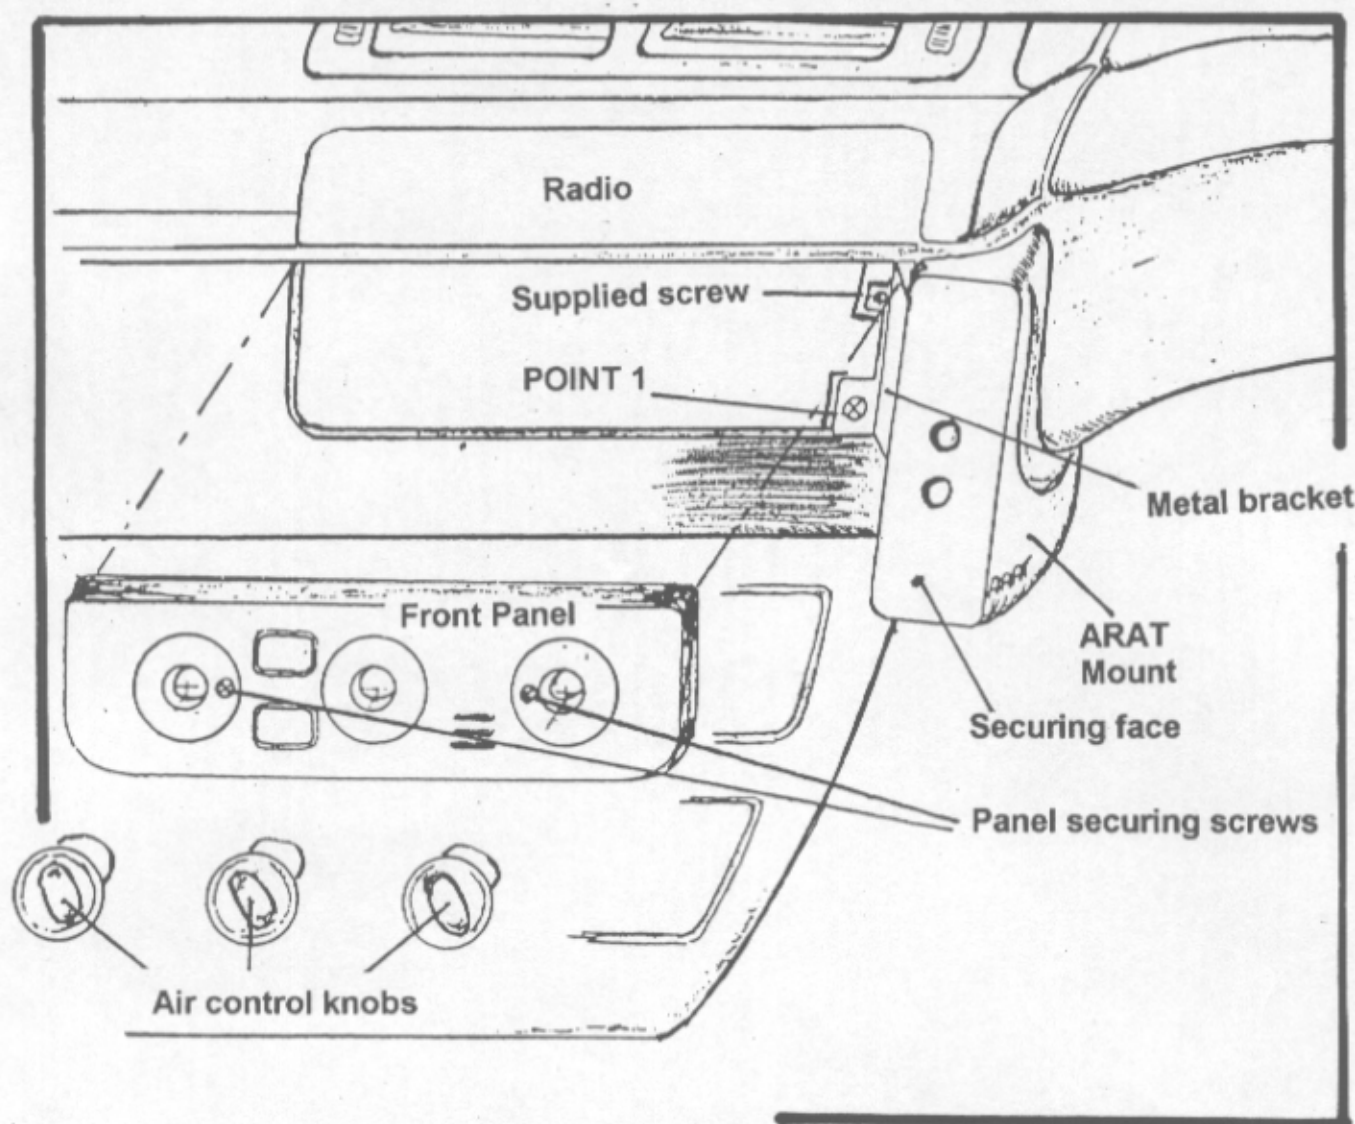

Installation instruction:

Remove the air control knobs by pulling them off (cars with Air/con remove the front air /con control panel). Remove the front panel and the screw at POINT 1. Place the ARAT mount to the contours of the dashboard and replace the screw at POINT 1 through the metal bracket of the mount. Screw the supplied screw through the top metal bracket into the material of the dashboard (pre-drill this hole). Replace the front panel and the air control knobs (air-con unit)